


Series RMA-B

Sealless Chemical Magnetic Drive Pump Close-coupled design

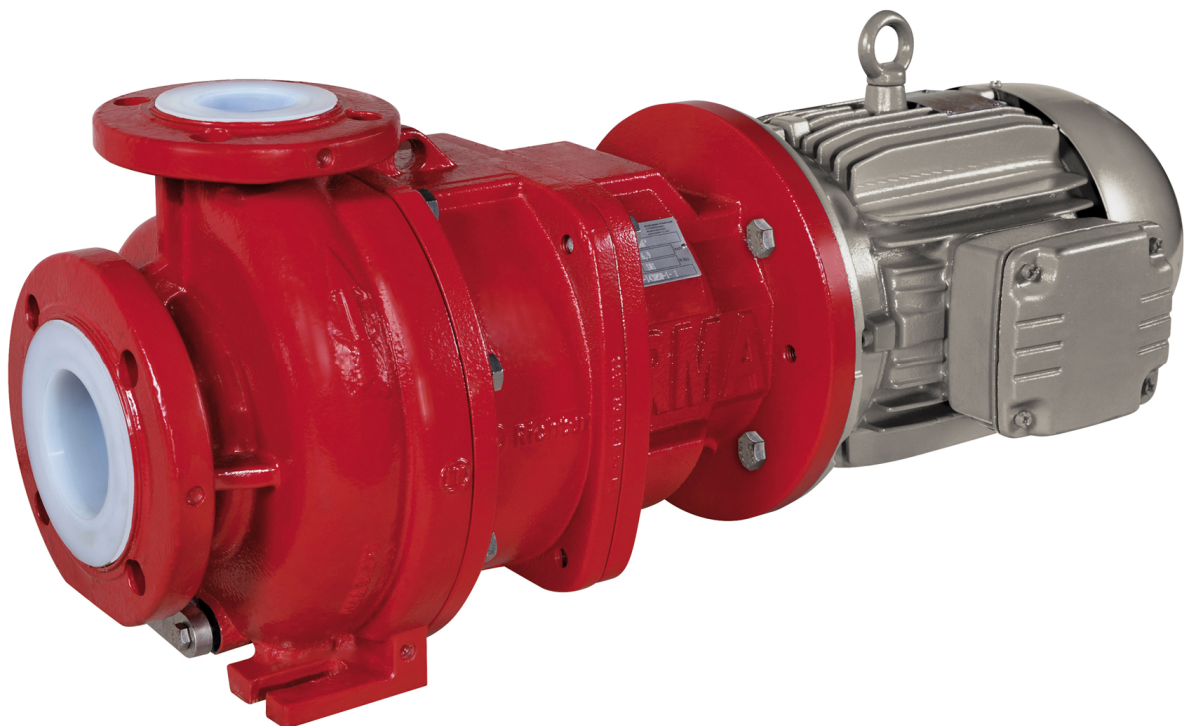

Keep for future use!

This operating manual must be strictly observed before transport, installation, operation and maintenance

Subject to change without notice.

Reproduction is generally permitted with indication of the source.

© Richter Chemie-Technik GmbH

9475-055-en Revision 12 Edition 08/2010

List of Contents

List of Contents	2	6 Commissioning/Shutdown.....	14
Relevant documents.....	3	6.1 Initial commissioning.....	14
1 Technical data.....	3	6.1.1 Filling the pump housing.....	14
1.1 Tightening torques.....	4	6.1.2 Start-up.....	14
1.2 Type plate, dry-running, ATEX and housing markings.....	4	6.2 Operating limits	14
1.3 Spareparts.....	4	6.2.1 Abrasive media.....	14
2 Safety.....	5	6.2.2 Min./max. flow rate.....	14
2.1 Intended use.....	5	6.3 Shutdown	15
2.2 Notes on safety for the customer / operator	6	6.4 Restarting.....	15
2.3 Notes on safety for maintenance	6	6.5 Improper operations and their consequences (examples)	15
2.4 Conversion work and production of spare parts by the customer.....	6	7 Maintenance.....	16
2.5 Improper operation	6	7.1 Safety-relevant screw fittings	16
2.6 Special requirements for explosion protection	6	7.2 Motor	16
2.6.1 Filling the unit	6	7.3 Cleaning	16
2.6.2 Special operating conditions.....	7	7.4 Stand-by pumps.....	16
2.6.3 Chargeable liquids.....	7	7.5 Notes on dismantling	16
2.6.4 Identification	7	7.5.1 Protective clothing	16
2.6.5 Check of the direction of rotation	7	7.5.2 Magnetic fields.....	16
2.6.6 Mode of operation of the pump	7	7.5.3 Changing the motor	16
2.6.7 Temperature limits.....	8	7.6 Dismantling	17
2.6.8 Maintenance.....	8	7.6.1 Removing adapter	17
2.6.9 Electric peripheral equipment	8	7.6.2 Dismantling motor, adapter and drive magnet assembly	17
3 Transport, storage and disposal	9	7.6.3 Dismantling slide-in unit.....	17
3.1 Return consignments	9	7.6.4 Dismantling housing/shaft spider	17
3.2 Disposal.....	9	7.7 Notes on assembly	18
4 Product description.....	10	7.7.1 Table for target dimension Z.....	18
5 Installation.....	11	7.8 Assembly.....	19
5.1 Safety regulations.....	11	7.8.1 Assembly of housing / shaft spider.....	19
5.2 Installation of pump/unit	11	7.8.2 Assembly of slide-in unit	19
5.3 Alignment of pump - motor	11	7.8.3 Assembly of drive unit.....	19
5.4 Piping.....	11	7.8.4 Final assembly.....	20
5.4.1 Nominal size.....	11	7.9 Tests	20
5.4.2 Nozzle loads.....	11	8 Malfunctions.....	21
5.4.3 Suction line.....	12	9 Sectional drawing.....	22
5.4.4 Supply lines.....	12	9.1 Legend	22
5.4.5 Discharge line.....	12	9.2 RMA-B close-coupled design.....	23
5.4.6 Venting and evacuating	12	10 Assembly aids.....	24
5.5 Pipe fittings.....	12	10.1 Boring template for housing drain	24
5.6 Monitoring facilities.....	12	10.2 Pull-off device for plain bearing bushes....	24
5.7 Drive	13	10.3 Dismantling device impeller-inner magnet assembly.....	24
5.8 Electric connection	13		

Relevant documents

- ◆ Data sheet
- ◆ Works certificate
- ◆ Sectional drawing
RMA-B close-coupled design 9475-00-3002
- ◆ Installation drawing
- ◆ Performance curves
- ◆ Spare parts list
- ◆ Operating manual and declaration of conformity motor

Appendix to the operating manual

- ◆ Operational limits 9275-00-0030
- ◆ Declaration of conformity with ATEX
- ◆ Declaration of conformity without ATEX
- ◆ Form for Safety Information Concerning the Contamination QM 0912-16-2001_en

On request:

- ◆ Magnetic drive data Richter TIS 0543-03-0001
- ◆ Publication: "Centrifugal Pump Operation without NSPH Problems"
- ◆ Publication "Safe Operation of Magnetic Drive Pumps"

1 Technical data

Manufacturer :

Richter Chemie-Technik GmbH
Otto-Schott-Str. 2
D-47906 Kempen
Telephone: +49 (0) 2152 146-0
Fax: +49 (0) 2152 146-190
E-Mail: richter-info@idexcorp.com
Internet: <http://www.richter-ct.com>

Richter EP (Nanjing) Co., LTd.
No. 18 Ailing Rd., Moling,
Jiangning Dev. Zone
211111 Nanjing
P.R. China

Telephone: +86 (0) 25 / 5275 1718
Fax: +86 (0) 25 / 5275 1747
E-Mail: jyin@idexcorp.com
Internet: <http://www.richter-ct.com>

Authorised person acc. to machine directive 2006/42/EG: Gregor Kleining

Designation :

Single-stage, plastic-lined, magnetic drive chemical centrifugal pump, series RMA-B, close-coupled design
Horizontal design, sealless, free of eddy currents

Technical specifications ASME B73.1, ASME B73/3M, ISO 15783, ISO 5199 and HI standards .

Connecting dimensions to ASME B73.1

Flange connecting dimensions:

ASME B16.5 Class 150

ATEX 95 Directive 94/9/EC

Machine Directive 2006/42/EC

Materials :

Pressure-bearing parts:

Ductile cast iron ASTM A 395 / EN-JS 1049

Wetted parts:

PFA, PTFE, SsiC and see data sheet.

Flow rate : up to 790 USgpm (180m³/h)
(at 3500 rpm)

Delivery head : up to 525 ft (160m) (at 3500 rpm)

Housing discharge pressure :
max. 275psi (19 bar)

Temperature range :

Operating conditions to standard	
ASME	ISO
-20 °F (-29 °C) up to 302 °F (150 °C)	-60 °C (-76 °F) up to 150 °C (302 °F)

Temperature classes as per ATEX :
see Section 2.6.7.

Admissible ambient conditions for pumps acc. to directive 94/9/ EG (ATEX 95) :

Ambient temperature range: 4 °F bis 104 °F,
-20 °C bis +40 °C (higher temperature after consulting the manufacturer)

Ambient pressure range: 11,6 psia – 16 psia
0,8 bar_{abs} – 1,1 bar_{abs}

Noise capacity level : L_{WA} = ≤ 70 dB acc. to
DIN EN ISO 9614-2

Sizes :

Group 1	Group 2
1,5"x1"x6"	3"x1,5"x8"
3"x1,5"x6"	3"x2"x8"
3"x2"x6"	4"x3"x8"
1,5"x1"x8"	3"x2"x10"

Weight : See data sheet

Dimensions : See installation drawing

1.1 Tightening torques

Screws greased, tighten in diametrically opposite sequence

Housing screws 901/3

Size [inch]	No. x size [ASME]	Tightening torque	
		[in-lbs]	[Nm]
1,5"x1"x6"	8 x 1/2"	415	47
3"x1,5"x6"	8 x 1/2"	415	47
3"x2"x6"	8 x 1/2"	415	47
1,5"x1"x8"	10 x 1/2"	390	44
3"x1,5"x8"	12 x 1/2"	415	47
3"x2"x8"	12 x 1/2"	415	47
4"x3"x8"	12 x 1/2"	415	47
3"x2"x10"	12 x 5/8"	743	84

Pipe screws, flanges to ASME B16.5 Class 150


DN [inch]	No. x size [ASME]	Tightening torque	
		[in-lbs]	[Nm]
1"	4 x 1/2"	70	8
1 1/2"	4 x 1/2"	135	15
2"	4 x 5/8"	220	25
3"	4 x 5/8"	400	45
4"	8 x 5/8"	310	35

1.2 Type plate, dry-running, ATEX and housing markings


The stainless steel type plate is undetachably riveted to the adapter.

If the operator attaches his identification, it must be ensured that the pump matches the application in question.

Example of type plate:

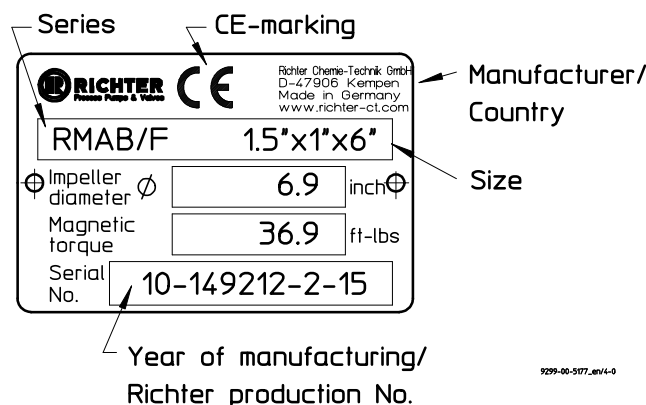

Dry-running:

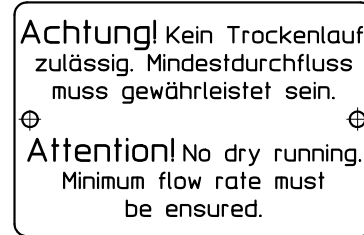

ATEX marking:



Housing identification:

The following are visible on the housing according to DIN EN 19:

- ◆ Nominal size
- ◆ Rated pressure
- ◆ Housing material
- ◆ Manufacturer's identification
- ◆ Melt number/Foundry identification
- ◆ Cast date

1.3 Spareparts

Spare parts for two years of continuous operation in accordance with DIN 24296 and in consultation with the manufacturer

2 Safety

This operating manual contains fundamental information which is to be observed during installation, operation and maintenance.

It must be read before installation and commissioning!

This operating manual must always be available at the place of use of the machine/plant.

Observe the safety notes in all the chapters.

Installation, operation and maintenance are to be performed by qualified staff.

The area of responsibility, authority and supervision of the staff must be exactly regulated by the customer.

If the staff does not have the necessary expertise, they are to be trained and instructed.

If necessary, this can be provided by the manufacturer/supplier on behalf of the machine operator.



General hazard symbol! People may be put at risk.



Safety symbol! The pump and its function may be put at risk if this safety symbol is not observed.



EU marking! Explosion-protected equipment must be identified for work in potentially explosive areas.



Warning of a magnetic field!



Warning of electric power!



This warning sign must be used if people with a pacemaker are at risk, e.g. from a strong magnetic field.

It is imperative to observe signs attached directly to the pump / unit, e.g.:

- ◆ Direction of rotation arrow
 - ◆ Warning against dry-running
- and they are to be kept legible.

Non-observance of the notes on safety may result in the loss of any and all claims for damages.

Non-observance may involve the following hazards :

- ◆ Failure of important functions of the machine/plant.
- ◆ Failure of electronic equipment and measuring instruments due to magnetic fields.
- ◆ Risk to people and their personal property from magnetic fields.
- ◆ Risk to people from electric, mechanical and chemical effects.
- ◆ Risks to the environment through leaks of hazardous substances.

If the unit is used in potentially explosive areas, special attention is to be paid to the sections identified with “Ex” in this operating manual.

2.1 Intended use

Richter pumps of the series RMA-B are plastic-lined magnetic drive centrifugal pumps for the leak-free conveyance of aggressive, toxic, pure and inflammable liquids. The pump is equipped with a permanent magnetic synchronous drive.

- ◆ Only operate the pump / the unit in a technically perfect condition.
- ◆ Only use the pump with the media described in the data sheet.

For vertical installation of the pump, please consult the manufacturer.

The observance of the specified physical limits is important for perfect functioning and safe operation, especially with regard to explosion protection to prevent potential sources of ignition (see **Section 2.6**):

- ◆ Avoid dry running.
- ◆ Make sure that the pump is only operated with a medium and not without one.
- ◆ For safe pump operation, we recommend a flow rate which lies between 0.3 and 1.1 Q_{opt} . The maximum operating temperature must never be exceeded. See **Section 2.6.7**. In case of doubt, you must consult the manufacturer.
- ◆ The manufacturer must be consulted in the event of entrainment of gas >2% as well as solids in order to avoid a lack of lubrication and dry-running.
- ◆ The plant NPSH value (NPSHA) should be 0.5 m higher than the NPSH value of the pump (NPSHR). See also **Section 5.4.1**.



Improper operation, even for brief periods, may result in serious damage to the unit.

In connection with explosion protection, potential sources of ignition (overheating, electrostatic and induced charges, mechanical and electric sparks) can result from these inadmissible modes of operation; their occurrence can only be prevented by adhering to the intended use.

Furthermore, reference is made in this connection to the Directive 95/C332/06 (ATEX 118a) which contains the minimum regulations for improving the occupational health and safety of the workers who may be at risk from an explosive atmosphere.



Do not operate the unit above the values specified in the data sheet for the

- ◆ fluid
- ◆ flow rate
- ◆ speed
- ◆ density
- ◆ head
- ◆ operating temperature and
- ◆ motor rating

Observe the instructions contained in the operating manual or contractual documentation; if necessary, consult the manufacturer.

All important features are documented in the data sheet included in the scope of delivery.

In the event of operating conditions other than those described in the data sheet, the following are to be checked again:

- ◆ design of the pump
- ◆ design of the accessories
- ◆ resistance of the materials.

2.2 Notes on safety for the customer / operator

The following must be observed:

- ◆ The notes on safety contained in this operating manual,
- ◆ the prevailing regulations on accident prevention,
- ◆ in-house work, operating and safety regulations of the customer.
- ◆ Protect hot, cold or moving machine parts from being touched on site.
- ◆ Do not remove any protective facilities when the machine is in operation.
- ◆ Exclude any risks from electricity.
- ◆ Remove leaks of hazardous media (e.g. explosive, toxic, hot) so that there is no risk to people and the environment. Observe statutory regulations.
- ◆ Provide and use protective equipment for the staff.



Caution when using the units in potentially explosive area!
Prevent inadmissible modes of operation.

2.3 Notes on safety for maintenance

- ◆ Strictly, work on the pump/unit may only be performed when it is at a standstill.
- ◆ The pump housing must have reached ambient temperature.
- ◆ The pump housing must be depressurized and drained.
- ◆ It is imperative to observe the procedure for stopping the machine described in this operating manual. See also **Section 6.3**.
- ◆ Decontaminate pumps which convey media hazardous to health.
- ◆ Immediately after completion of the work, re-install all safety and protective facilities or put them into operation again.

- ◆ When installed, the magnetic drives do not represent any risk of environmental impact if the notes on safety are observed (see also **Sections 5.1** and **7.5.2**).



It is imperative to observe the notes on safety in **Section 7.5.2** during dismantling and assembly as well as during transport and storage of magnetic drives as single components.

- ◆ Observe the points listed in **Section 6.1** prior to recommissioning.

2.4 Conversion work and production of spare parts by the customer

- ◆ Conversion of or changes to the machine are only admissible after consultation with the manufacturer.
- ◆ Only use original spare parts or parts approved by the manufacturer.
- ◆ The use of other parts may annul the liability for any resultant consequences.

2.5 Improper operation

- ◆ The operational safety of the machine supplied is only guaranteed if it is used properly in accordance with **Section 2.1** of this operating manual.
- ◆ The operating limits specified in the data sheet must under no circumstances be exceeded.

2.6 Special requirements for explosion protection

If the units are used in potentially explosive areas, the measures and notes in **Sections 2.6.1 to 2.6.9** are imperative to observe the explosion protection.

2.6.1 Filling the unit



During pump operation the wetted interior of the pump must always be filled with the liquid medium.

This prevents any explosive atmosphere and the risk of dry-running.



If the customer cannot ensure this, we recommend that appropriate monitoring facilities be provided.



Also carefully fill auxiliary, heating and cooling systems.

2.6.2 Special operating conditions

In the standard design the can chamber and the plain bearings are cooled and lubricated by a flushing flow.

Owing to properties of the medium (e.g. sticking due to inadmissible solids entrainment, clogging, gas entrainment etc.) the cooling flow can be interrupted and, as a result, an inadmissible temperature rise may occur. Provide appropriate monitoring facilities. See **Section 5.6**.

For safe pump operation, we recommend a flow rate of 0.3 to 1.1 Q_{opt} . If the pump is operated outside this range, it must be ensured that the max. admissible flow rate according to the pump characteristic curve is not exceeded and that the max. admissible operating temperature according to **Section 2.6.7** is observed.

If the flow rate is too high, the differential pressure upstream and downstream of the plain bearings could fall so much that a lack of lubrication or dry-running may occur.

If the flow rate is too low, the medium may heat up so much owing to the fluid friction that the max. admissible surface temperature of the relevant temperature class is exceeded.

Overloading, overheating, non-observance of the design data or the incorrect selection of the magnetic drive can lead to the decoupling of the inner and outer magnet assemblies. As a result, eddy currents may be induced on the inner and outer magnet assemblies and an inadmissible temperature rise may occur.

The situation is to be remedied by providing appropriate monitoring facilities. See **Section 5.6**.

The plant NPSH value (NPSHA) should be minimum 0.5 m higher than the NPSH value of the pump (NPSHR) to prevent a lack of lubrication or dry-running of the plain bearings.

2.6.3 Chargeable liquids



For operation with chargeable liquids with a conductivity $< 10^{-8}$ S/m inert gas must be used for flushing during drain. See also **Section**

6.3.

2.6.4 Identification



The identification on the pump relates to the pump section. A separate declaration of conformity must be provided for the shaft coupling and motor and for other attachments as well as corresponding identification.

Example of the identification of the pump section:



I12GD IIC TX X.

For assembling the pump with components which are not explosion-protected (e.g. motor, shaft coupling), it is recommended to mask or remove the "potentially explosive" identification from the pump component and, if necessary, from other accessories.

In this case the declaration of conformity applies without ATEX identification.

At surface temperatures which depend primarily on operating conditions, DIN EN 13463-1 Chapter 9.3 allows no temperature class or temperature to be indicated.

The temperature class must be determined by the operator in accordance with **Section 2.6.7** "Temperature Limits".

2.6.5 Check of the direction of rotation



If there is also a risk of explosion during the installation phase, the check of the direction of rotation must under no circumstances be conducted by briefly switching on the unfilled pump in order to prevent an inadmissible rise in temperature at the plain bearings.

We recommend you to only perform a check of the direction of rotation with with filled pump and with a rotating field instrument. See also **Section 6.1.2**.

2.6.6 Mode of operation of the pump

The pump may only be started with the suction side shut-off element fully opened and the discharge side shut-off element slightly opened. Start-up against a closed check valve is also possible. The discharge side shut-off element is to be regulated to the operating design point directly after run-up.

See also **Section 5.4.1**.

Operation with closed shut-off elements in the suction and/or discharge lines is not permitted!



There is a risk that even after a short time high surface temperatures on the pump housing may occur owing to rapid heating of the liquid in the pump interior.



A rapid rise in the pressure inside the pump involves the risk of overloading to the point of bursting.



The pump must not be in operation in the unfilled or partially filled state (dry running). This results in serious damage to the pump and additional risks to the environment can arise.



Dry-running cannot only occur with an insufficiently filled interior but also in the event of high gas contents in the liquid medium.

Operation of the pump outside the admissible operating range may also lead to dry-running (e.g. due to evaporation in the interior).

2.6.7 Temperature limits



In the normal operating condition the highest temperatures are to be expected on the surface of the pump housing.

In the case of liquids >40 °C (>104 °F) the surface temperature of the pump housing is generally lower than the temperature of the liquid as the plastic lining has an insulating effect.



If the pump is heated (e.g. heating jacket), it must be ensured that the temperature classes prescribed in the annex are observed.

The non heated pump surface must have free contact with the environment.



When operating the pump, make sure that an excessive deposit of dust is avoided (possibly regular cleaning). This prevents the pump surface from heating to above the admissible temperature.

The plant customer must ensure that the prescribed operating temperature is observed. The maximum admissible temperature of the liquid medium at the pump inlet depends on the temperature class and the selected lining material required in each case.

The following always applies: No inadmissible temperatures may be introduced into the motor and the specifications of the motor manufacturer must be observed.

The temperature limits of the fluid given in **Table 2** only apply when motors are used where the motor manufacturer permits at least the following temperatures for the motor flange and motor shaft:

Table 1

Temperature class	Motor flange	Motor shaft
T6	70 °C(158 °F)	70 °C(158 °F)
T5	70 °C(158 °F)	80 °C(176 °F)
T4	75 °C(167 °F)	85 °C(185 °F)
T3	75 °C(176 °F)	85 °C(212 °F)
T2	75 °C(176 °F)	85 °C(212 °F)
T1	75 °C(176 °F)	85 °C(212 °F)

At the same time the specified max. admissible ambient temperature of 40 °C must not be exceeded.

Table 2 below indicates the admissible medium temperature, depending on the pump design, as a function of the temperature class in accordance with EN 13463-1.

Table 2

Temperature class acc. to EN 13463-1	Limit value of the temperature of the liquid	
	PFA	
T6	85 °C (185 °F)	75 °C ¹⁾ (167 °F)
T5	100 °C (212 °F)	90 °C ¹⁾ (194 °F)
T4	135 °C (275 °F)	150 °C (302 °F)
T3	200 °C (392 °F)	150 °C (302 °F)
T2	300 °C (572 °F)	150 °C (302 °F)
T1	450 °C (842 °F)	150 °C (302 °F)

1) The limit values specified for the temperature of the medium at the pump inlet are determined for the most unfavourable case (high speed, low flow, low heat capacity of the medium, ...). Under favourable operating conditions the limit values specified may be increased by up to 5 K after consultation with the manufacturer.

In the case of motors with the type of protection "increased safety", no or low temperature entries are generally permitted for the motor shaft and motor flange related to an ambient temperature of 40 °C (104 °F).

In these cases the max. admissible medium temperature is 20 K above the temperature which may be introduced into the motor.

e.g.: Max. motor shaft temperature: 60°C (140 °F)
Max. motor flange temperature: 65°C (149 °F)

This results in a maximum medium temperature for the pump of **80 °C (60 °C + 20K) (176 °F (140 °F +20K))**.

2.6.8 Maintenance



To achieve safe and reliable operation, it must be ensured in inspections at regular intervals that the unit is properly serviced and kept in technically perfect order.

In regard to media containing solids, the maintenance intervals must be set by the operator in accordance with the conditions of operation.

If auxiliary systems (e.g. cooling, heating) are installed, check to see whether monitoring facilities are required to ensure their function.

2.6.9 Electric peripheral equipment



Electric peripheral equipment, e.g. pressure, temperature and flow sensors etc. must comply with the prevailing safety requirements and explosion protection provisions.

Regular checks of the motor bearings in accordance with the operating manual of the motor manufacturer. Observe ATEX notes.

3 Transport, storage and disposal

The pump or the unit must be transported properly. It must be ensured that during transport the pump/unit remains in the horizontal position and does not slip out of the transport suspension points.

A pump or motor can be suspended from the ring bolt provided for this purpose.

The suspension points are not suitable for transporting a complete unit, i.e. pump with base plate and motor.

In this case, the slinging points for the ropes on the base plate are to be used. See **Fig. 1**.

The slinging ropes must not be attached to free shaft ends or to the ring bolt of the motor.

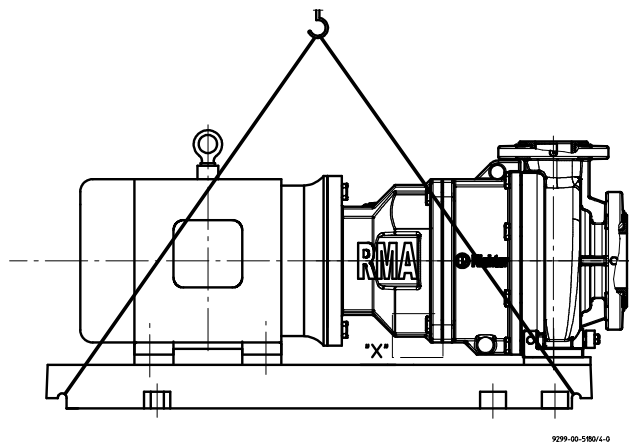


Fig. 1

Directly after receipt of the goods, the consignment must be checked for completeness and any in-transit damage.



Damaged pumps must not be installed in the plant.

When unpacking magnetic drives as single parts, the relevant notes in **Section 7.5.2** must be observed.

Handle goods carefully to prevent damage.

Flange covers serve as protection during transport and must not be removed.

If the unit is not installed immediately after delivery, it must be put into proper storage.

The product should be stored in a dry and vibration-free, well ventilated room at as constant a temperature as possible.

Elastomers are to be protected against UV light.

In general, a storage period of 10 years should not be exceeded. An admissible storage period of 4 years applies to elastomers made of NBR.



If magnetic drives are stored as single parts, the relevant notes in **Section 7.5.2** are to be observed.

In the case of prolonged storage conservation agents on machined component surfaces and packing with a desiccant may be necessary.

3.1 Return consignments



Pumps which have conveyed aggressive or toxic media must be well flushed and cleaned before being returned to the manufacturer's works.

It is imperative to enclose a safety information sheet / general safety certificate on the field of application with the return consignment.

Pre-printed forms are enclosed with the installation and operating manual.

Safety precautions and decontamination measures are to be mentioned.

3.2 Disposal

Parts of the pump may be contaminated with medium which is detrimental to health and the environment and therefore cleaning is not sufficient.



Risk of personal injury and damage to the environment due to the medium or oil!

- ◆ Wear protective clothing when work is performed on the pump.
- ◆ Prior to the disposal of the pump:
 - Collect any medium, oil etc. which has escaped and dispose of it in accordance with the local regulations.
 - Neutralise any medium residues in the pump.
- ◆ Separate pump materials (plastics, metals etc.) and dispose of them in accordance with the local regulations.

4 Product description

The housing dimensions, nominal ratings and technical requirements of the pump series RMA-B correspond to ASME B73.1, ASME B73.3, ISO 15783, ISO 5199. The technical requirements of the VDMA 24279 are satisfied.

The sectional drawing shows the design of the pump. See **Section 9**.

All components which come into contact with the medium are either plastic-lined or made of other resistant materials, e.g. silicon carbide.

The housing **100** consists of a metallic shell with a plastic lining.

The shaft spider **338** is pressed into the housing and secured with the anti-torsion inserts **566/1**.

The two bearing bushes **545** are pressed in from the bearing pedestal side and secured with the anti-torsion insert **566/2**.

The distance ring **504** is inserted in-between.

The can **159** is made of CFK (high-resistance, carbon fibre composite material). It is protected against the corrosive medium by a can insert **158** made of resistant plastic.

The thrust ring **510/3** is pressed in and has a positive connection with the shaft **222** to prevent it from turning. The shaft **222** is mounted with a positive connection in the can insert **158**.

The impeller **230** and the inner magnet assembly **859** can be separated and can therefore be replaced independently of each other. Both components have a positive connection for power transmission.

The static tightness of the pump is guaranteed by the screw fittings of the bracket **344** and housing **100**. The bearing pedestal gasket **404** and the lips of the can unit are jammed between both components with the required sealing force.

The torque is transmitted from the motor shaft through whose key to the drive magnet assembly **858**.

This is axially secured with the hex. socket screw **914/1** and the toothed lock washer **936/1**. The magnets are glued into the drive magnet assembly **858**.

In the event of a leak in the can unit, the closed lantern construction offers additional time-limited protection against the medium leaking into the atmosphere.

For this purpose, an additional gasket **404** is provided between the bracket **344** and bearing pedestal **330**.

The flushing flow is guided on the outside past the impeller assembly into the can. The flushing flow returns to the housing through flushing bores in the impeller assembly and through the plain bearings.

Further design details are provided in the enclosed drawing. Additional information are provided in the brochure and the product manual.

5 Installation

5.1 Safety regulations



Equipment which is operated in potentially explosive areas must satisfy the explosion protection regulations.



People with a pacemaker are at risk from the strong magnetic field of the magnetic drive. It may be life-threatening for them to stay at a distance of less than 20" (500 mm) to the pump.

5.2 Installation of pump/unit

The structural work must be prepared in accordance with the dimensions in the installation drawing.

Method of installation: on a grouted base plate and firm foundation

- Align base plate on the ground foundation.
- Insert foundation bolts and grout base plate.
- Do not tighten the foundation bolts uniformly and firmly until the mortar has set.

Other possibilities of installing the pump are:

- ◆ 4-point installation
- ◆ 4-point installation with base plate.



As soon as additional installations are mounted, the stability of the entire unit installed without a foundation must be checked.

5.3 Alignment of pump - motor



The following information is of a general nature. If necessary, special notes of the coupling and motor manufacturer are to be observed.

- Before starting alignment, undo the screw fitting of the support bracket from the adapter and motor.
- Align the unit with the housing so that there is no tension and retighten the screws.
- Use supports in the direct vicinity of the bolts foundation/base plate.

5.4 Piping

Before the pump is installed, both, the suction and supply lines as well as the discharge line are to be cleaned.


Dirt or damage to the sealing surfaces is best avoided if the flange covers remain on the flanges until just before installation.

Use flange gaskets suitable for the medium.

The screw tightening torques in **Section 1.1** are to be observed for tightening the flange screws.

5.4.1 Nominal size

The operating design point of a centrifugal pump lies at the intersection of the pump curve and the pipe curve, see **Fig. 2**. The pump curve is provided by the pump manufacturer. The pipe curve is determined using diagrams or PC programs.

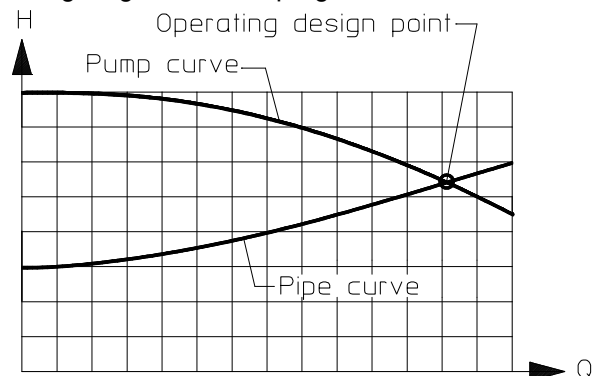

9299-00-5009_en/4-0

Fig. 2

Under no circumstances can the nominal size of the piping be derived from the connected nominal size of the pump.

The pipe nominal size can also be determined using the flow rate as a rough guide.

$$v \text{ (ft/s)} = \frac{Q \text{ (gpm)}}{449 \times A \text{ (ft}^2\text{)}} \quad v \text{ (m/s)} = \frac{Q \text{ (m}^3\text{/s)}}{A \text{ (m}^2\text{)}}$$

The velocity in the suction line should not exceed 6.56 ft/s (2 m/s) and 16.4 ft/s (5 m/s) in the discharge line.

When determining the suction line nominal size, the NPSH value (net positive suction head) must also be observed. The **NPSHR value** required for the pump is specified in the data sheet.



The NPSHR available in the plant should be at least 1,64 ft (0,5 m) higher than the NPSHR required for the pump. Otherwise, this will lead to a drop in the delivery head, cavitation or even failure of the pump.

5.4.2 Nozzle loads

The pump can be subjected to nozzle loads in accordance with ANSI/HI 9.6.2.

Changes in the length of the piping caused by temperature are to be allowed for by appropriate measures, e.g. the installation of expansion joints.

5.4.3 Suction line

The suction lines must always be laid on a rising gradient towards the pump. Otherwise, gas bubbles may form which considerably reduce the suction line cross section. Eccentric transition elements must be installed between different pipe diameters.

Valves which disrupt the course of flow should not be installed directly upstream of the pump.

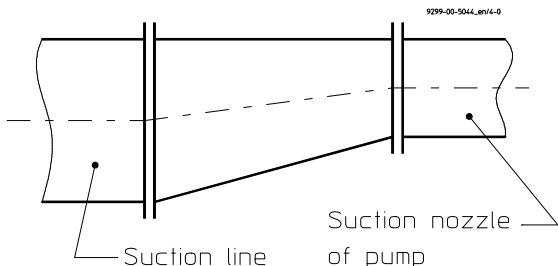


Fig. 3

5.4.4 Supply lines

Supply lines should vent towards the reservoir and are therefore to be laid with a constant downward gradient towards the pump. Should the piping internals upstream of the pump be horizontal, a low point can, of course, be located upstream of these internals. From here the pipe is then laid with an upward gradient to the pump so that the gas bubbles which form here can escape through the pump.

Valves which disrupt the course of flow should not be installed directly upstream of the pump.

5.4.5 Discharge line

Do not arrange the shut-off valve directly above the pump but initially provide a transition section.

The discharge nozzle velocity of the medium can – if necessary – be reduced.

5.4.6 Venting and evacuating

Venting can take place into the discharge line or upstream of the discharge valve.

A venting line can also be used as a bypass, drain or flushing line.

The pump housing is fitted with a drain connection as a standard feature. Optionally, the drain bore can be drilled.

See **Fig. 4**.

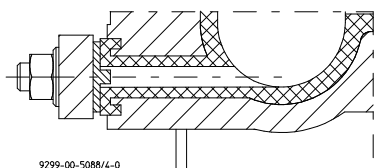


Bild 4

5.5 Pipe fittings

The following pipe fittings are available from Richter on request:

- ◆ Shut-off valves
- ◆ Check valves
- ◆ Sight glasses
- ◆ Priming vessels
- ◆ Strainers
- ◆ Pressure gauges

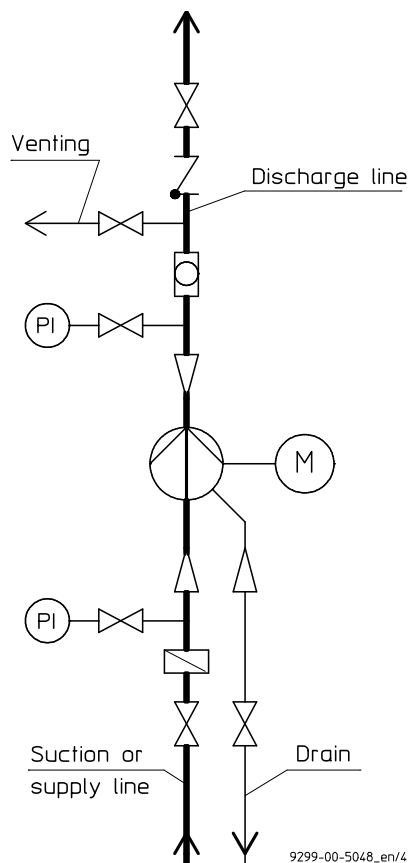


Fig. 5

5.6 Monitoring facilities

Appropriate monitoring facilities are to be recommended, depending on the requirements placed on operational safety and availability of the unit.



Richter provides information on request and can supply:

- ◆ Flow meters
- ◆ Filling level indicators
- ◆ Motor load monitors

You can obtain the publications "Safe Operation of Magnetic Drive Pumps" and "The Operation of Centrifugal Pumps without NPSH Problems" on request.

5.7 Drive

The power consumption of the pump at the operating design point is specified in the data sheet and works certificate. If the operating design point was not known when the pump was dispatched, the power consumption can be read off the appropriate performance curves. The max. density, the max. viscosity and a safety margin are to be allowed for.

Care must be taken when selecting the motor size to ensure that the excess power is not too great, but meet requirements acc. to ANSI/HI respec. ISO 5199. During start-up the magnetic drive could otherwise stop.

The magnetic drive rating at nominal speed is given in the pump data sheet.

If the motor rating exceeds this magnetic drive rating – at nominal speed –, it is necessary to check for any stoppage of the magnetic drive.

This also applies if the required drive rating exceeds 80% of the magnetic drive rating – at nominal speed.

Consult Richter if necessary.

Different operating data can be achieved without changing the pump through the use of different speeds, e.g. by means of a frequency converter.

The pump with base plate and motor is illustrated in the **installation drawing**.

Observe the **operating manual of the motor manufacturer**.



A motor with a valid ATEX certificate is to be used if employed in zone 1 and 2.

5.8 Electric connection

The operator is obligated to connect the assembly in accordance with existing regulations 8 (IEC, VDE, etc.).



Allow only a trained electrician to perform the electrical connection.

Compare the existing mains voltage with the indications on the motor's manufacturer's nameplate and choose a suitable circuit.

A motor protection device (motor-circuit switch) is urgently recommended.



Danger of explosion if the electrical installation is incorrect.



In areas at risk of explosion, IEC 60079-14 must also be observed for the electrical installation.

If the pump is mounted on a base plate, ensuring electrical conduction through the use of a chopper disk or contact disk on the housing foot and support bracket.

The assembly must be grounded in accordance with currently effective regulations, for example, on the base plate.

6 Commissioning/Shutdown

6.1 Initial commissioning

Normally, the pumps have already been test-run with water.

Unless special agreements have been reached, there may still be some residual amounts of water in the pump. This must be noted in view of a possible reaction with the medium.

6.1.1 Filling the pump housing

- Check to see whether the screws on the suction flange, discharge flange, housing flange and drain flange are tightened. When tightening the housing screws, it must be ensured that the screw fitting on the support bracket of the adapter and motor is undone. Otherwise, the pump may be subjected to tension.

For screw tightening torques see [Section 1.1](#).

- Open the suction line fully so that the medium can flow into the pump.
- Open the discharge valve so that the air in the pump can escape.
- If air cannot be vented into the discharge line, e.g. a drop in pressure in this line is not permitted, venting must be performed upstream of the discharge valve.
- Monitor the venting operation until no air but only liquid emerges.
- Turn the pump shaft at the coupling several times.
- Monitor the venting operation again until no more air emerges.
- Close the discharge valve again until only the minimum flow rate is obtained after the motor has been started.



6.1.2 Start-up

- Check to see whether the pump shaft can be readily turned by hand.
- Check the direction of rotation of the motor with the coupling disengaged or with a rotary field instrument.
- As viewed from the motor, the direction of rotation of the pump is clockwise. See also the **direction of rotation arrow** of the pump.



The pump must not run dry during the check of the direction of rotation.

- Check alignment of the coupling.
- Mount coupling guard.



The pump must be completely filled with liquid.

The maximum admissible flow rate must not be exceeded.



Otherwise the plain bearings can run dry in both cases.

- Switch the motor on.
- Set the desired flow by opening the discharge valve.

When the motor is running but the pump is not conveying, this means that the magnetic drive has stopped.

- Switch motor off immediately in order to prevent overheating of the magnet assemblies.

Then proceed as follows:

- Close discharge valve down to the position "minimum flow rate"
- Start motor again.

If the magnetic drive stops again, look for the cause.

6.2 Operating limits



The operating limits of the pump/unit in terms of pressure, temperature, power and speed are entered in the data sheet and it is imperative to observe them!

6.2.1 Abrasive media



If liquids with abrasive constituents are conveyed, increased wear at the pump is to be expected. The inspection intervals should be reduced compared with the usual times.

6.2.2 Min./max. flow rate

The operating range generally recommended lies at $0.3 Q_{opt}$ to $1.1 Q_{opt}$. Consult the manufacturer for operation outside this range and observe [Section 2.6.2](#).

6.3 Shutdown

- Close discharge valve down to the position "minimum flow rate"
- Switch motor off.
- Close discharge valve completely.

Only close the suction line if the pump is to be evacuated or dismantled.



For all work on the machine, make sure that the motor cannot be inadvertently switched on.



If the pump is to be evacuated or flushed, observe the local regulations.



If the pump has been operated with a chargeable liquid, it must be filled with inert gas (e.g. nitrogen) to prevent an explosive atmosphere.

It is recommended to wait one hour before the pump is dismantled from the plant to permit static peak charges to be eliminated.

If the pump is returned to the manufacturer's, clean the pump very thoroughly.

Siehe auch [Kapitel 3.1](#).

6.4 Restarting

When the pump is restarted, it must be ensured that all the relative steps as described in [Section 6.1](#) are repeated, depending on the progress of the shutdown operation.

6.5 Improper operations and their consequences (examples)



Improper operation, even for brief periods, may result in serious damage to the unit.

In connection with explosion protection, potential sources of ignition (overheating, electrostatic and induced charges, mechanical and electric sparks) can result from these inadmissible modes of operation; their occurrence can only be prevented by adhering to the intended use.

Pump is started up without medium :

- ◆ If no heat is dissipated, damage to the inner and drive magnet assemblies may occur.

Pump is started up without medium :

- ◆ The plain bearing in the pump may be destroyed.
- ◆ Other pump components may be destroyed due to overheating.

Suction line not opened or not opened fully :

- ◆ Pump is cavitating – material damage to pump and plain bearings
- ◆ Pump does not attain the required delivery head or flow rate.
- ◆ Pump may be destroyed due to overheating.

Discharge valve opened too much :

- ◆ Pump may be destroyed due to overheating.
- Axial thrust too great.

Discharge valve closed too much :

- ◆ Pump can cavitate. Particularly severe with an empty discharge line.
- ◆ Risk of pressure surge.
- ◆ Possible damage to the plain bearings.
- ◆ Magnetic drive may stop.
- ◆ Motor may be overloaded.

Suction valve and discharge valve closed :

- ◆ Destruction due to rapid overheating and sharp rise in pressure.

Control of the pump with the suction valve :

- ◆ Cavitation – the volume may only be regulated on the discharge side. Cavitation – the volume may only be regulated on the discharge side.

Overrun of the admissible gas content:

- ◆ The flow may stop.
- ◆ Switch pump and vent off for renewed conveyance.
- ◆ Make sure that the gas content is not exceeded, as described in the intended use.

7 Maintenance

7.1 Safety-relevant screw fittings

After initial loading by the operating pressure and operating temperature the tightening torques of all connection screws must be checked at the following points:

- ◆ housing flange
- ◆ suction flange
- ◆ discharge flange
- ◆ draining flange

See also **Section 6.1.1, para. 1.**

Other inspections are to be performed regularly, depending on the operating requirements.

7.2 Motor

Observe the operating manual of the motor manufacturer.

A motor with a valid ATEX certificate is to be used if employed in zone 1 and 2.

Observe the ATEX notes of the motor manufacturer.

7.3 Cleaning

Care must be taken when cleaning the pump to ensure that it is not exposed to a strong water jet.

7.4 Stand-by pumps

If a pump is on stand-by, it is to be started up from time to time. Regularly turn the shaft by hand in the direction of rotation.

This operation is to be performed more often for pumps which are exposed to very strong vibrations from the plant.

When dismantling the pump from the plant, drain it, thoroughly clean it, seal with flange covers and store in accordance with the instructions.

7.5 Notes on dismantling

- ◆ All repair and maintenance work is to be performed by skilled staff using appropriate tools and original spare parts.
- ◆ Is the necessary documentation available?
- ◆ Has the pump been shut down, drained and flushed in accordance with the regulations?
See also **Section 6.3.**
- ◆ If no new assembly is performed immediately after dismantling, the plastic and ceramic components in particular must be stored carefully.

- ◆ Dismantling can be checked using the sectional drawing in **Section 9** and the components available.

7.5.1 Protective clothing



Even if the pump has been properly evacuated and flushed, residue of the medium may still remain in the pump, e.g. between sealing surfaces or in the bearing seats or in the can.

Plastic components may absorb medium which gradually emerges from the material after flushing.

Proper protective clothing is to be worn.

Protective clothing is also to be worn even if only the adapter is to be removed. Medium may penetrate the lantern chamber through the can.

7.5.2 Magnetic fields



Caution! Strong magnetic fields

Risk during dismantling and in the vicinity of magnetic drives as single parts.

Remove loose parts and other magnetisable metals from the work bench. They could otherwise be attracted: **Risk of accident!**

Place any tools needed at a safe distance.

Keep electronic equipment and measuring instruments at a distance. In cases of doubt consult the equipment manufacturer.

Hold magnetic drives as single parts firmly or secure. Otherwise they could be attracted, for example, by a vice: Risk of accident!

People with an artificial pacemaker

Keep torso at a minimum distance of **20" (500 mm)**.

For safety's sake, a distance of 6" (150 mm) should be observed for watches, electric data carriers, data carriers with magnetic strips etc.

7.5.3 Changing the motor

If the motor has to be changed, the pressure-bearing section of the pump can remain in the plant.

For procedure, see **Section 7.6.2.**

7.6 Dismantling

There are two possibilities for dismantling:

1. Dismantling the complete pump from the plant.
2. Dismantling the complete slide-in unit as the pump housing can remain in the plant connected to the piping.

Dismantling of the complete pump is described here.

- Undo the support bracket from the base plate. The adapter and support bracket are one component in bearing group 1. In bearing group 2 the support bracket **183** is attached with 2 hex. screws **901/2** and contact discs **557/2** to the adapter **346**. With the motor group TSC from size 280 upwards, the motor has the support bracket and not the adapter.

If the housing **100** remains in the plant, leave the housing gasket **401** in the centering to protect the housing sealing surface.

7.6.1 Removing adapter

- Undo screws **901/5** from the connection bracket/adapter.
- Remove adapter **346** from the centering of the bracket **344**. If necessary, use two levers.
- To overcome the axial magnetic forces, pull the adapter **346** upwards with a firm jerk.



CAUTION! When pulling out the bearing pedestal, the axial magnetic forces (up to max. 400 N without weight force) decrease abruptly after being at maximum. Risk of accident!

The operating torque of the magnetic coupling installed is specified on the type plate.

7.6.2 Dismantling motor, adapter and drive magnet assembly

- Undo motor nuts and screws **901/7**.
- Remove the plugs from the adapter.
- Undo setscrew **904/1**.
- Pull adapter **346** forward.
- Pull drive magnet assembly **858** off the motor shaft using a pulling-off device.
- Remove adapter **346**.

7.6.3 Dismantling slide-in unit

- Undo housing screws **901/3**.
- Screw 2 hex. screws **901/3** into the forcing thread of the bracket **344**.
- Press the housing **100** with the aid of these hex. screws out of the bracket **344**.
- Remove bracket **344** with bearing pedestal gasket **404** upwards.
- Raise can **159** and can insert **158**. As the shaft **222** is introduced tightly into the can insert **158**, this shaft is automatically removed together with the thrust ring **510/3**.



Make sure that no parts of the plain bearing fall. Risk of breakage!

- Remove shaft **222** with thrust ring **510/3** from the can. Place a suitable tool, e.g. scribing iron, behind the thrust ring and pull it off applying force at several positions.
- Remove housing gasket **410**.
- Raise inner magnet assembly **859** vertically with the impeller **230**. The wear ring **502/1** is removed from the housing **100** at the same time.
- Remove thrust ring **510/2** using a screwdriver.
- Press the bearing bushes **545** and distance ring off the impeller from the suction side. Use a suitable mandrel made of plastic.
- Remove anti-torsion insert **566/2**.
- The circlip **932/7** must be destroyed to separate the impeller **230** and inner magnet assembly **859**. For this purpose, carefully cut the circlip open with a cutting knife all around the notch.
- Press impeller **230** out of the seat of the inner magnet assembly **859**. For this purpose, clamp the inner magnet assembly **859** in a vice, being careful not to damage the surfaces, and press the impeller **230** out towards the suction side.
- Carefully remove the remaining parts of the circlip **932/7**.

7.6.4 Dismantling housing/shaft spider

- Pull shaft spider **338** out of the housing seat.
- Remove the two anti-torsion inserts **566/1**.
- Remove shaft sleeve **523/1** from the shaft spider **338**.

7.7 Notes on assembly

- ◆ Use original spare parts. See also **Section 2.4**.
- ◆ Do not use defective parts.
- ◆ Has the pump been shut down, drained and flushed in accordance with the regulations?
See also **Section 6.3**.
- ◆ Apply Anti-Seize special assembly paste (e.g. from Weicon) to the fitting surfaces (not any stainless steel surfaces) and screw thread prior to assembly.
- ◆ Check whether all parts fit and only then assemble.
- ◆ Important dimensions (centerings, bearing fits or bearing play) are to be checked prior to assembly; perform a trial assembly if required.
- ◆ We recommend that the housing gasket **401** and the shaft sleeve **523/1** be replaced during every new assembly.
- ◆ Always replace the circlip **932/7**.
- ◆ Remove metallic particles adhering to magnetic components such as the inner magnet assembly **859** and the drive magnet assembly **858** prior to assembly.
For this purpose simple plasticene can be used..
- ◆ A complete assembly process is described in the following.
Sub-sections can be deduced from this.
See also **Section 7.5**.
- ◆ The following assembly dimensions must be observed:

	Dimension F	
	[inch]	[mm]
Group 1	3.93	100
Group 2	4.33	110

Groups see **Section 1**.

Dimension F

End face of drive magnet assembly to contact surface of adapter.

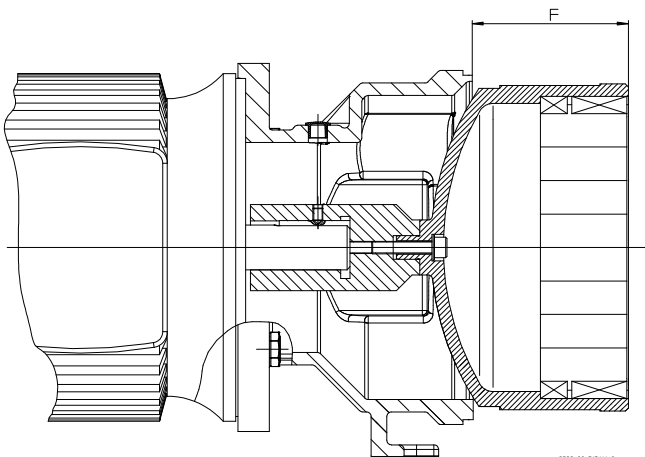


Fig. 6

7.7.1 Table for target dimension Z

The plain bearings require a minimum axial play for perfect functioning. This axial play "Z" must be checked using the drawing **Fig. 7** after completion of assembly.

Size	Dimension Z inch (mm)
1,5"x1"x6"	...0.02 - 0.06 (0.5 - 1.5)
3"x1,5"x6"	
3"x2"x6"	
1,5"x1"x8"	
3"x1,5"x8"	
3"x2"x8"	
4"x3"x8"	
3"x2"x10"	

Z : required axial play of the plain bearings.

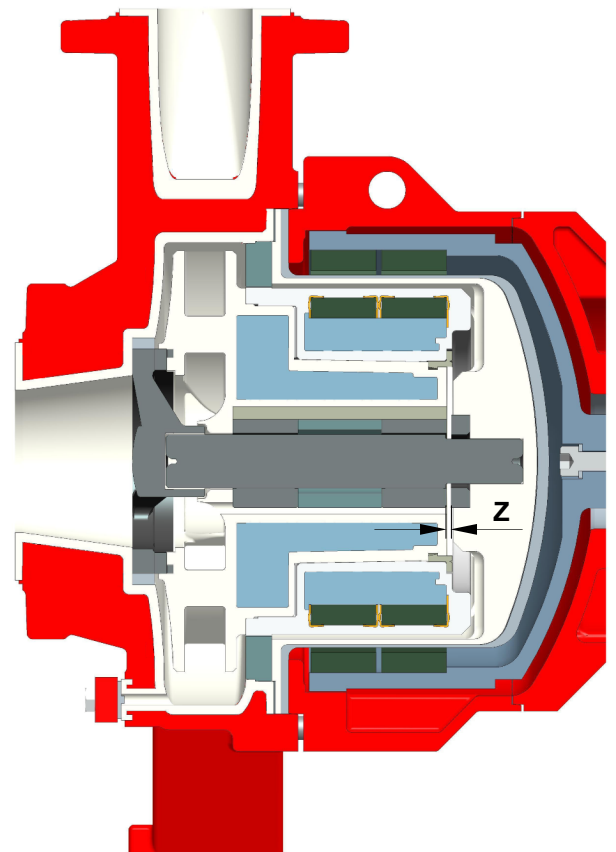


Fig. 7

7.8 Assembly

A complete assembly process is described in the following.

Sub-sections can be deduced from this.

7.8.1 Assembly of housing / shaft spider

- Push or press the shaft spider **338** into the housing **100** together with the two anti-torsion inserts **566/1**.

Use a suitable plastic tube for pressing.



The pressing force must only be applied over the sliding surface of the shaft spider.
(risk of the silicon carbide breaking)

- Insert shaft sleeve **523/1** into the shaft spider **338**.

7.8.2 Assembly of slide-in unit

- Press the inner magnet assembly **859** onto the impeller **230**. Pay attention to the correct alignment of the driver cams.
- Press the circlip **932/7** into the appropriate groove on the impeller **230** with a suitable plastic tube. Make sure that the click connection of the circlip **932/7** audibly engages to perform its function.
- Press the bearing bush **545/1** into the impeller **230** together with the anti-torsion insert **566/2**. Make sure that the anti-torsion insert **566/2** is approx. 2 mm shorter than the plain bearing.
- Insert the distance ring **504** and then the bearing bush **545/2**.
- Carefully press the thrust ring **510/2** into the impeller **230** right to the stop. Pay attention to the correct position of the anti-torsion insert grooves in relation to the carrier webs in the impeller **230**.
- Check whether the thrust ring protrudes about 2 mm out of the impeller. See [Fig. 8](#).

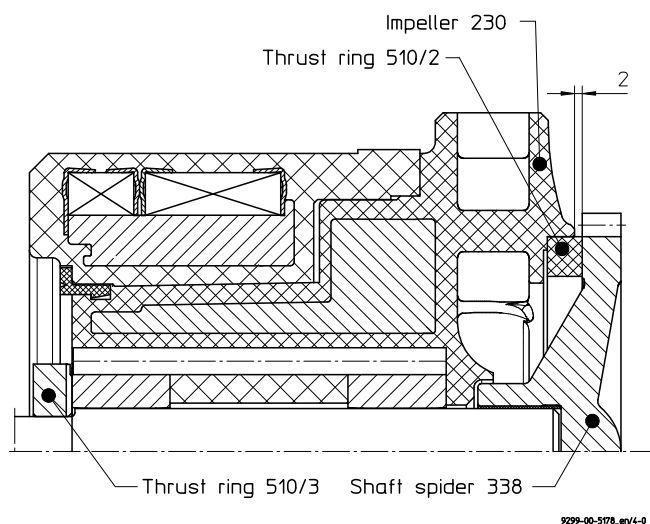


Fig. 8

- Assemble can **159** and can insert **158**. To simplify assembly, the can insert **159** can be cooled if necessary.
- Introduce thrust ring **510/3** into the can insert **158**. Make sure that the flushing grooves are facing outwards.
- Press shaft **222** into the can insert **158**.



CAUTION: Align the shaft with the flat pivot point in the thrust ring (risk of the silicon carbide breaking)

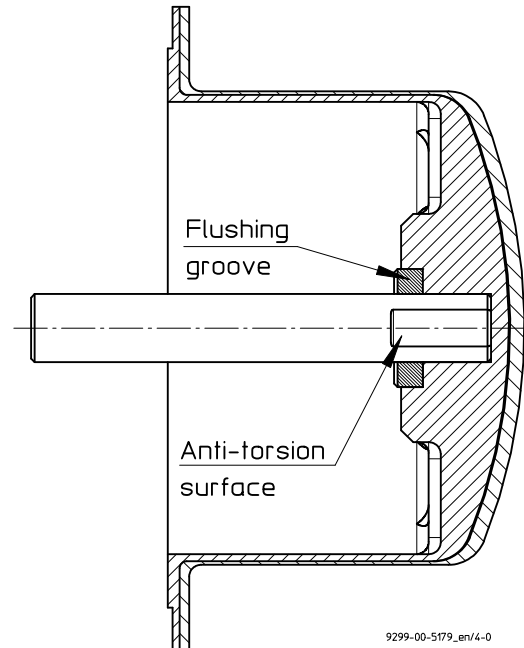


Fig. 9

7.8.3 Assembly of drive unit

- Affix adapter **346** to the motor flange with hex. screws **901/7**.
- Check fit of the drive magnet assembly **858**/hollow drive shaft **216**.
- Using Anti-Seize special assembly paste (e.g. from Weicon) assemble the shaft **216** to the outer magnet **858**.
- Tighten hex. socket screw **914/5** with toothed lock washer **936/1**.
Put 1 drop of adhesive on the thread of the drive shaft, e.g. Loctite 243 from the company Loctite (Dublin, Munich or Vienna) or an equivalent.
Only one drop of the adhesive is to be applied per thread. Otherwise the next dismantling operation will be more difficult or no longer possible without destroying components.
- Tightening torque group 1 = 150 in-lbs (17Nm)**
Tightening torque group 2 = 265 in-lbs (30Nm)
- Assemble the hollow drive shaft **216** / drive magnet assembly **858** unit to the motor shaft.
- Ensure dimension "F" (see [Fig. 6](#) under [Section 7.7](#)) is true.
- Possibly it is necessary to machine the key of the motor shaft by drilling bit new. See sectional drawing in [Section 9.2](#).

- Tighten setscrew **904/1** using Loctite to the motor shaft using access hole in the adapter at 12 o'clock.
- Check whether the hollow drive shaft/drive magnet assembly unit can be easily turned.

7.8.4 Final assembly

- Deposit the housing **100** on a workbench, for example, with the suction nozzle facing downwards. In doing so, protect the plastic sealing strip against damage with a suitable base.
- Insert housing gasket **401** into the centering of the housing **100**.
- Mount pre-assembled slide-in unit concentrically onto the shaft spider **338**.
- Press outer wear ring **502/1** into the housing **100**.
- Insert pre-assembled can unit. The lip of the can insert **158** must rest on the housing gasket **401**.



Press shaft 222 carefully through the bearing bushes 545 into the shaft spider 338. (Risk of the silicon carbide breaking)

- Mount bracket **344** and tighten hex. screws **901/3** to the required torque, see [Section 1.1](#).
- Check whether the rotating unit has the necessary axial play. For this purpose reach through the suction nozzle and move the rotating unit axially. The axial play can be determined through the discharge nozzle. See [Section 7.7.1](#).
- If the minimum axial play is not attained, insert more housing gaskets **401**.
- Insert bearing pedestal gasket **404** into the appropriate location on the bracket **344**.



When inserting the unit, high axial magnetic forces (up to max. 400 N without weight force) occur which decrease abruptly after reaching maximum.



Only hold the bearing pedestal in front of the flange (on motor side). (Risk of injury from being squeezed)

- Push drive unit using the crane into the bracket **344**.
- Tighten bracket screw **901/5** slightly.
- Align support bracket.
- Tighten bracket screw **901/5** firmly.

Tightening torque group 1 = 354 in-lbs (40Nm)
Tightening torque group 2 = 486 in-lbs (55Nm)

- Seal the thread for the forcing-off screws in the bracket and the opening in the adapter with plugs.

7.9 Tests

On request, the pumps are tested with water at the manufacturer's.

The operating data measured are then documented in a works test certificate.

If, during a test after repairs, discrepancies compared with the works certificate are discovered, the following people can be called in:

1. in-house pump office
2. The manufacturer Richter or its local agent

The following conveying data can be checked using the **pump performance curves**:

- ◆ Flow rate
- ◆ head
- ◆ Power requirement
- ◆ NPSHR

8 Malfunctions



Faults may result from inadmissible modes of operation. Improper operation, even for brief periods, may result in serious damage to the unit.

In connection with explosion protection, potential sources of ignition (overheating, electrostatic and induced charges, mechanical and electric sparks) can result from these inadmissible modes of operation; their occurrence can only be prevented by adhering to the intended use.

See also **Section 6.5**.

Should there be any uncertainty about the remedy to be applied, please inquire at the in-house pump office or at the pump manufacturer's.

No delivery :

- ◆ Is the pump filled and vented?
- ◆ Is the suction line open, vented, cleaned and correctly laid?
- ◆ Is the discharge line open, vented, cleaned and correctly laid?
- ◆ Is the geodetic head too high?
- ◆ Is air being drawn in?
- ◆ Has the magnetic drive stopped?

Flow rate too low :

- ◆ Have the pump, suction line and discharge line been completely vented, filled and cleaned?
- ◆ Have any strainers installed been cleaned?
- ◆ Are all shut-off devices open?
- ◆ Is the geodetic head too high?
- ◆ Is the NPSHA too low or the NPSHR too high?
- ◆ Are the pipe resistances too high?
- ◆ Is the viscosity too high?
- ◆ Is the direction of rotation correct?
- ◆ Is the speed too low or the impeller diameter too small?
- ◆ Are pump parts worn?
- ◆ Gas in the medium?

Flow rate too high :

- ◆ Is the geodetic head too low?
- ◆ Are the pipe or nozzle resistances too low?
- ◆ Is the pump speed too low or the impeller diameter too large?

Delivery pressure too high :

- ◆ Is the speed too high or the impeller diameter too large?
- ◆ Is the density too high?

Motor consumes too much electricity :

- ◆ Is the flow rate, density or viscosity too high?
- ◆ Is the speed too high or the impeller diameter too large?
- ◆ Is the coupling correctly aligned?
- ◆ Can the pump shaft be turned properly?

Pump does not run smoothly or creates noises :

- ◆ Are the ball bearings on the motor damaged?
- ◆ Are parts of the hydraulics damaged?
- ◆ Is the flow rate too low or too high?
- ◆ Is the impeller balanced?
- ◆ Is the pump twisted?
- ◆ Is there foreign matter in the pump?

Leak from the pump :


- ◆ Are all screws tightened to the correct tightening torque?
- ◆ Were the sealing surfaces assembled in a clean state?
- ◆ Have approved gaskets been installed?

9 Sectional drawing

9.1 Legend

100	casing (housing)	401	housing gasket
122	blind cover	404	bearing pedestal gasket
158	containment shell insert (can insert)	415/1	centering gasket
159	containment shell (can)	502/1	wear ring
216	hollow drive shaft	504	distance ring
222	shaft	510/x	thrust ring
230	impeller	523/1	shaft sleeve
319	impeller bearing	545/x	bearing bush
includes		566/x	anti-torsion insert
	504/1 distance ring	800/1	motor
	545/x bearing bush (plain bearing bush)	858	drive magnet assembly
	566/2 anti-torsion insert	859	inner magnet assembly
338	shaft spider	901/x	hex. screw
includes		904/1	setscrew
	523/1 shaft sleeve	914/x	hex. socket screw
	566/1 anti-torsion insert	932/7	circlip
344	bracket	936/1	toothed lock washer
346	adapter		

9.2 RMA-B close-coupled design

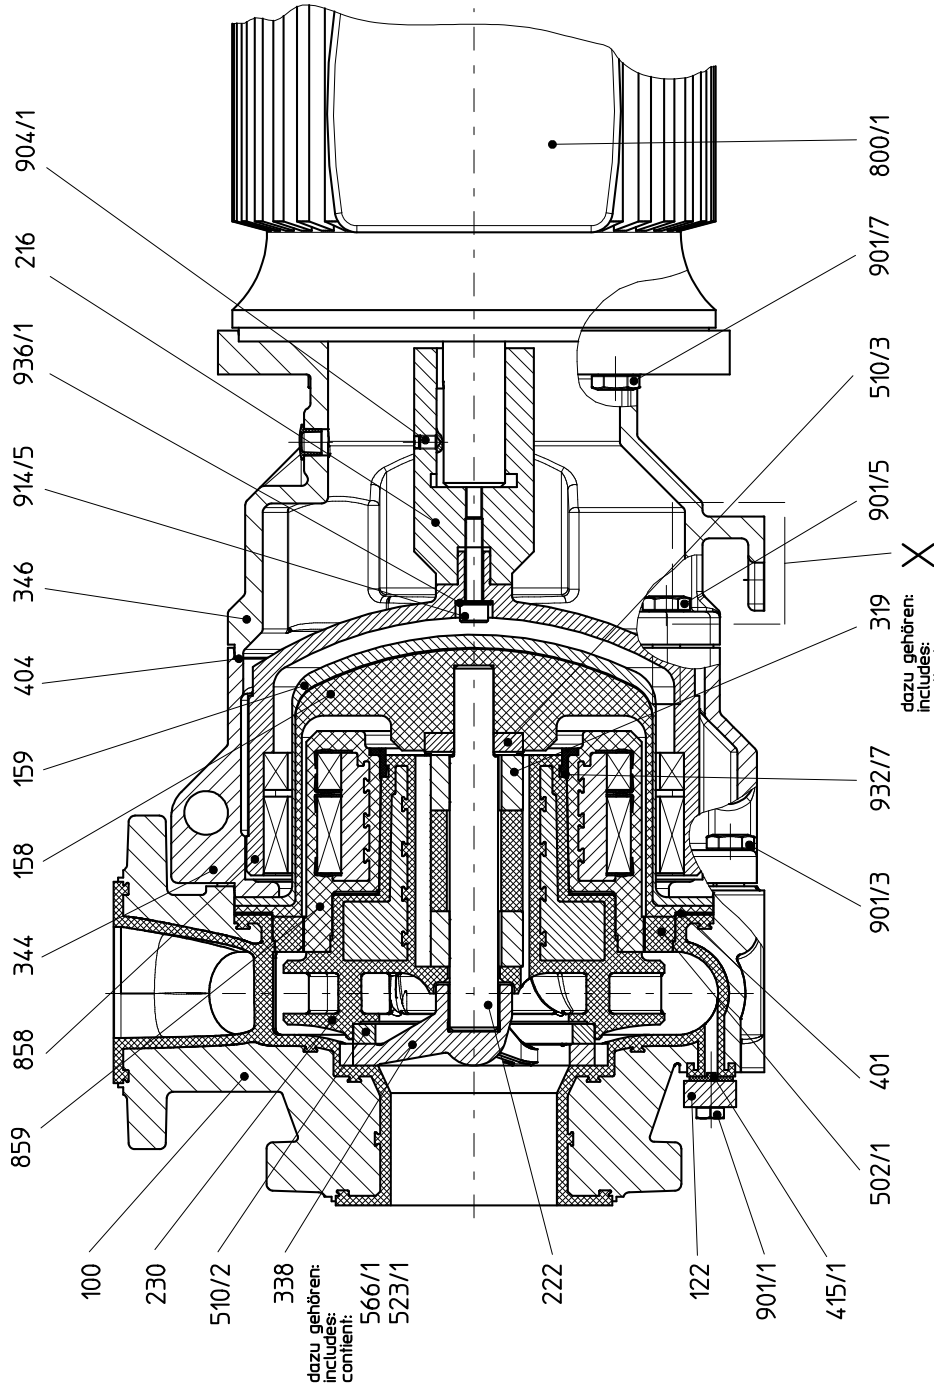


dazu gehören:
includes:
contient:
566/1
523/1


dazu gehören:
includes:
contient:
504/1
545/1
545/2
566/2

Einzelheit X / Detail X / Détail X

Ausführung für Gruppe 2 TC- Motoren
Design for group 2 TC- motor
Construction pour groupe 2 TC- moteur

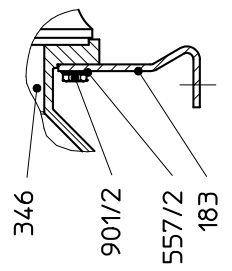


Adapter für TSC Motoren ohne Stützfuß ab Motorgröße 280
Adapter for TSC motor without support bracket up to motor size 280
Adaptor pour TSC moteurs sans patte-support à partir de la taille 280



10 Assembly aids

10.1 Boring template for housing drain


Pump size	Ident. No.
Group 1+2	9217-89-1096

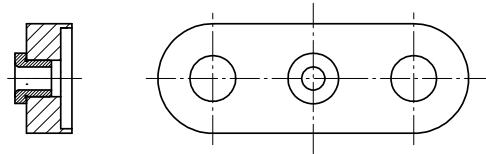

9299-00-5039/4-0

10.2 Pull-off device for plain bearing bushes

Pump size	Ident. No.
Group 1	9427-89-1005

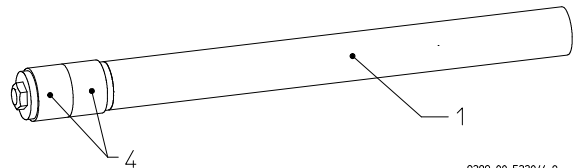

9299-00-5220/4-0

Product description

If the plain bearing bushes have to be removed from the impeller, we recommend the use of a special pull-off device. It prevents unnecessary damage to the shock-sensitive silicon carbide components through the use of suitable materials.

This device is made of malleable rubber material with a plastic handle (polyethylene).

Application

Remove plain bearing bush on the inner magnet assembly side:


- Push the device with the rubber part in front from the suction side through the impeller.
- Position the two rubber parts (4) centrally on the bearing bush.
- Axially tighten the rubber parts by turning the handle (1) to the right; as a result they expand radially.
- This creates a friction connection between the device and the plain bearing bush which does not damage the material.
- The bearing bush can now be removed by hitting the handle centre axially.

10.3 Dismantling device impeller-inner magnet assembly

Pump size	Ident. No.
Group 1	9427-89-1001

Product description

Serves to dismantle the inner magnet assembly and impeller.
Consists of clamping tube and plate for pushing out the impeller.

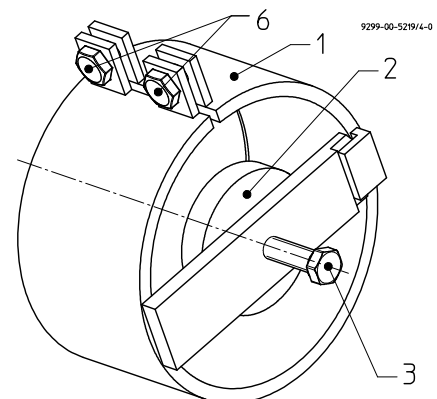

9299-00-5219/4-0

Application

- The circlip in the notch must be cut open. See [Chapter 7.6.4](#).
- Press the device with the clamping tube (1) over the inner magnet assembly.
- Tighten the two hex. screws (6) with about 30 Nm.
- Using the hex. screw (3), turn the plate (2) against the impeller and press the impeller off.

Baureihe/Series/Série Ausführung **Magnetkupplungspumpe**
 Design **Magnet drive pump**
 Construction **Pompe à entraînement magnétique**




RMA
RMA-B

Modification techniques possibles sans réservations!
 Graphique non à l'échelle!
 Dimensions variables uniquement revêtues d'une signature!

This leaflet is subject to alteration!
 Drawing not to scale!
 Certified for construction purposes only when signed!

Technische Änderungen vorbehalten!
 Nicht maßstäblich!
 Maße nur mit Unterschrift verbindlich!

Einsatzgrenzen / operating limits

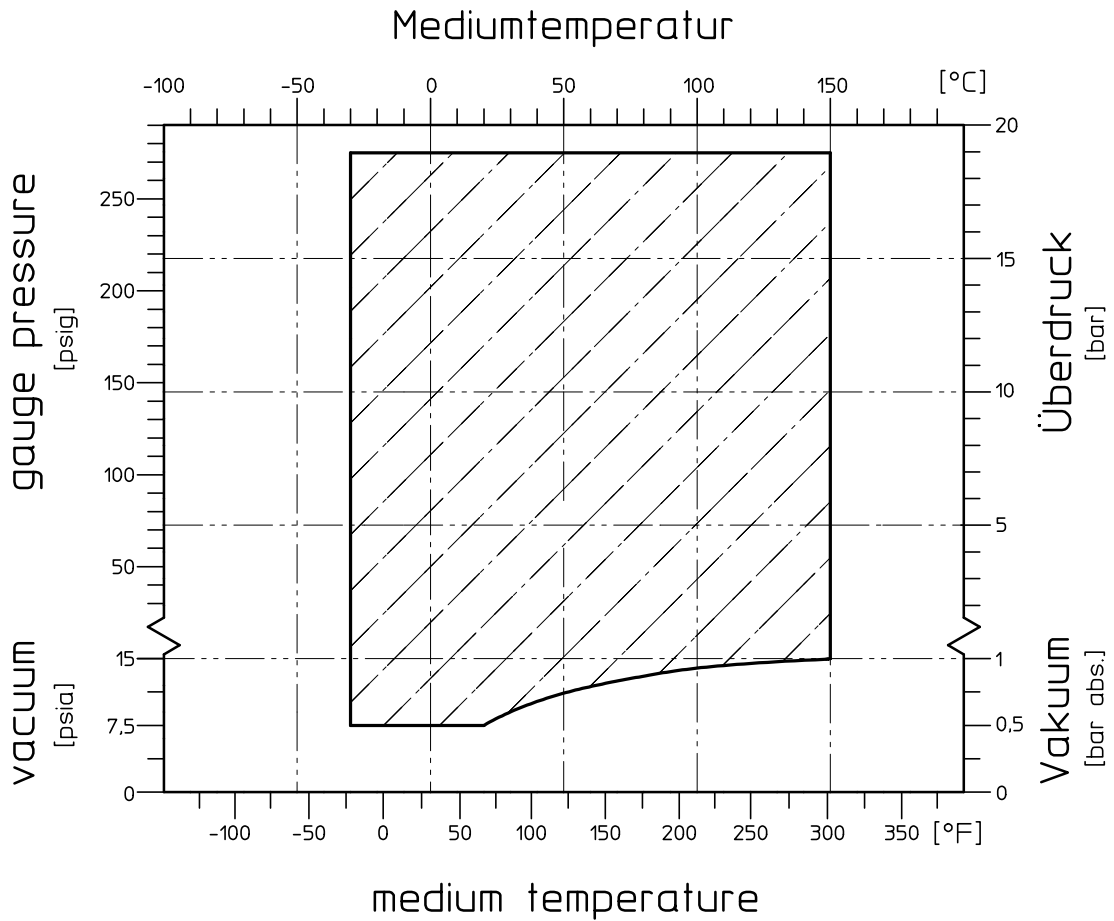

CE Konformitätserklärung nach EN ISO//IEC 17050
Declaration of Conformity according to EN ISO//IEC 17050

Produkt Magnetkupplungs-Chemiekreiselpumpe
 freies Wellenende, Blockausführung oder als Aggregat¹⁾
 Product *Magnetic Drive Chemical Centrifugal Pump*
Bare shaft, block version or as unit¹⁾

Baureihe MNK, MNK-B, MNK-X, MNK-XB, MNK-S, MNK-SB, MNKA, MNKA-B
 Series MPB, MDK, MDK-B, RMA, RMA-B, RMI, RMI-B

EU-Richtlinien 2006/42/EG Maschinenrichtlinie *Machinery Directive*
 EU-Directive 94/9/EG Explosionsschutzrichtlinie ATEX *Equipment explosive atmosphere*

Modul Interne Fertigungskontrolle
Production Quality Assurance

Angewandte EN 14121
 harmonisierte Normen EN 809
 Applied harmonised EN 13463-1
 Standards

Kennzeichnung 2006/42/EG
 Marking 94/9/EG



Die technische Dokumentation nach Richtlinie 94/9EG ist bei der u.a. benannten Stelle hinterlegt.
The technical documentation is filed by below mentioned notified body according to directive 94/9/EC.
 Physikalische-Technische Bundesanstalt (PTB), D-38116 Braunschweig

Baureihe Series	Registrier-Nr. Registered #	Baureihe Series	Registrier-Nr. Registered #	Baureihe Series	Registrier-Nr. Registered #
MNK	02ATEXD032	MNKA	04ATEXD007	RMA	09ATEXD062
MNK-B	03ATEXD006	MNKA-B		RMA-B	09ATEXD062
MNK-X	02ATEXD032	MPB	03ATEXD068	RMI	
MNKXB	03ATEXD006	MDK	02ATEXD009	RMI-B	
MNK-S	02ATEXD032	MDK-B	03ATEXD008		
MNK-SB	03ATEXD006				

Das Unternehmen Richter Chemie-Technik GmbH bescheinigt hiermit, dass die o.a. Baureihen die grundsätzlichen Anforderungen der aufgeführten Richtlinien und Normen erfüllt.
Richter Chemie-Technik GmbH confirms that the basic requirements of the above specified directives and standards have been fulfilled.


Bevollmächtigt für die Zusammenstellung der technischen Unterlagen nach 2006/42/EG: A. Linges
Authorised person compiled the technical files according to 2006/42/EG:

1) Gilt nicht für das Aggregat nach 94/9/EG (ATEX Leitfaden Juni 2009 Abschn. 3.7.5 2.a)
 1) *Not valid for the unit according to 94/9/EG (ATEX Guideline June 2009 Paragraph 3.7.5 2.a)*

Kempen, 01.03.2010



G. Kleining
 Leiter Forschung & Entwicklung
 Manager Research & Development



A. Linges
 Leiter Qualitätsmanagement
 Quality Manager

CE **Konformitätserklärung** nach EN ISO//IEC 17050
Declaration of Conformity according to EN ISO//IEC 17050

Produkt <i>Product</i>	Magnetkupplungs-Chemiekreiselpumpe als Aggregat <i>Magnetic Drive Chemical Centrifugal Pump as unit</i>
Baureihe <i>Series</i>	MNK, MNK-B, MNK-X, MNK-XB, MNK-S, MNK-SB, MNKA, MNKA-B MPB, MDK, MDK-B, RMA, RMA-B, RMI, RMI-B
EU-Richtlinien <i>EU-Directive</i>	2006/42/EG Maschinenrichtlinie <i>Machinery Directive</i>
Modul	Interne Fertigungskontrolle <i>Production Quality Assurance</i>
Angewandte harmonisierte Normen <i>Applied harmonised Standards</i>	EN 14121 EN 809
Kennzeichnung <i>Marking</i>	2006/42/EG CE

Das Unternehmen Richter Chemie-Technik GmbH bescheinigt hiermit, dass die o.a. Baureihen die grundsätzlichen Anforderungen der aufgeführten Richtlinien und Normen erfüllt.
Richter Chemie-Technik GmbH confirms that the basic requirements of the above specified directives and standards have been fulfilled.


Bevollmächtigt für die Zusammenstellung der technischen Unterlagen nach 2006/42/EG:
Authorised person compiled the technical files according to 2006/42/EG:

A. Linges

Kempen, 01.07.2010



G. Kleining
Leiter Forschung & Entwicklung
Manager Research & Development

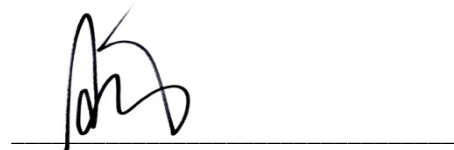

A. Linges
Leiter Qualitätsmanagement
Quality Manager

Safety Information / **Declaration of No Objection** Concerning the Contamination of Richter-Pumps, -Valves and Components

1 SCOPE AND PURPOSE

Each entrepreneur (operator) carries the responsibility for the health and safety of his employees. This extends also to the personnel, who implements repairs with the operator or with the contractor.

Enclosed declaration is for the information of the contractor concerning the possible contamination of the pumps, valves and component sent in for repair. On the basis of this information for the contractor is it possible to meet the necessary preventive action during the execution of the repair.

Note: The same regulations apply to repairs **on-site**.

2 PREPARATION OF DISPATCH

Before the dispatch of the aggregates the operator must fill in the following declaration completely and attach it to the shipping documents. The shipping instructions indicated in the respective manual are to be considered, for example:

- Discharge of operational liquids
- remove filter inserts
- lock all openings hermetically
- proper packing
- Dispatch in suitable transport container
- Declaration of the contamination fixed **outside!!** on the packing

Declaration about the Contamination of Richter Pumps, -Valves and Components

The repair and/or maintenance of pumps, valves and components can only be implemented if a completely filled out declaration is available. If this is not the case, delay of the work will occur. If this declaration is not attached to the devices, which have to be repaired, the transmission can be rejected.

Every aggregate has to have it's own declaration.

This declaration may be filled out and signed only by authorized technical personnel of the operator.

Contractor/dep./institute : _____ Street : _____ Postcode, city: _____ Contact person: _____ Phone : _____ Fax : _____ End user : _____	Reason for transmitting <input checked="" type="checkbox"/> Please mark the applicable Repair: <input type="checkbox"/> subject to fee <input type="checkbox"/> Warranty Exchange: <input type="checkbox"/> subject to fee <input type="checkbox"/> Warranty <input type="checkbox"/> Exchange/ Replacement already initiated/received Return: <input type="checkbox"/> Leasing <input type="checkbox"/> Loan <input type="checkbox"/> for credit note																																												
A. Details of Richter-product:																																													
Classification: _____ Article number: _____ Serial number: _____	Failure description: _____ Equipment: _____ Application tool: _____ Application process: _____																																												
B. Condition of the Richter-product:																																													
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th style="width:30%;"></th> <th style="width:10%; text-align: center;">no¹⁾</th> <th style="width:10%; text-align: center;">yes</th> <th style="width:10%; text-align: center;">no</th> </tr> </thead> <tbody> <tr> <td>Was it in operation ?</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> </tr> <tr> <td>Drained (product/operating supply item) ?</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>All openings hermetically locked!</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>Cleaned ?</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> </tbody> </table>		no ¹⁾	yes	no	Was it in operation ?	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Drained (product/operating supply item) ?	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	All openings hermetically locked!	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Cleaned ?	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th style="width:60%;"></th> <th style="width:10%; text-align: center;">no¹⁾</th> <th style="width:10%; text-align: center;">yes</th> </tr> </thead> <tbody> <tr> <td>Contamination : toxic</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>caustic</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>inflammable</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>explosive²⁾</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>mikrobiological²⁾</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>radioactive³⁾</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>other pollutant</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> </tbody> </table>		no ¹⁾	yes	Contamination : toxic	<input type="checkbox"/>	<input type="checkbox"/>	caustic	<input type="checkbox"/>	<input type="checkbox"/>	inflammable	<input type="checkbox"/>	<input type="checkbox"/>	explosive ²⁾	<input type="checkbox"/>	<input type="checkbox"/>	mikrobiological ²⁾	<input type="checkbox"/>	<input type="checkbox"/>	radioactive ³⁾	<input type="checkbox"/>	<input type="checkbox"/>	other pollutant	<input type="checkbox"/>	<input type="checkbox"/>
	no ¹⁾	yes	no																																										
Was it in operation ?	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>																																										
Drained (product/operating supply item) ?	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																										
All openings hermetically locked!	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																										
Cleaned ?	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																										
	no ¹⁾	yes																																											
Contamination : toxic	<input type="checkbox"/>	<input type="checkbox"/>																																											
caustic	<input type="checkbox"/>	<input type="checkbox"/>																																											
inflammable	<input type="checkbox"/>	<input type="checkbox"/>																																											
explosive ²⁾	<input type="checkbox"/>	<input type="checkbox"/>																																											
mikrobiological ²⁾	<input type="checkbox"/>	<input type="checkbox"/>																																											
radioactive ³⁾	<input type="checkbox"/>	<input type="checkbox"/>																																											
other pollutant	<input type="checkbox"/>	<input type="checkbox"/>																																											
If yes, with which cleaning agent: _____ and with which cleaning method: _____																																													
¹⁾ if "no", then forward to D. ← ²⁾ Aggregates, which are contaminated with microbiological or explosive substances, are only accepted with documented evidence of an approved cleaning. ³⁾ Aggregates, which are contaminated with radioactive substances, are not accepted in principle.																																													
C. Details of the discharged materials (must be filled out imperatively)																																													
1. With which materials did the aggregate come into contact ? Trade name and/or chemical designation of operational funds and discharged materials, material properties, e.g. as per safety data sheet (e.g. toxic, inflammable, caustic)																																													
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th style="width:30%;"></th> <th style="width:30%; text-align: center;">Trade name:</th> <th style="width:40%; text-align: center;">Chemical designation:</th> </tr> </thead> <tbody> <tr> <td>X</td> <td></td> <td></td> </tr> <tr> <td>a)</td> <td></td> <td></td> </tr> <tr> <td>b)</td> <td></td> <td></td> </tr> <tr> <td>c)</td> <td></td> <td></td> </tr> <tr> <td>d)</td> <td></td> <td></td> </tr> </tbody> </table>			Trade name:	Chemical designation:	X			a)			b)			c)			d)																												
	Trade name:	Chemical designation:																																											
X																																													
a)																																													
b)																																													
c)																																													
d)																																													
2. Are the materials specified above harmful to health ? no yes <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ←																																													
3. Dangerous decomposition products during thermal load ? no yes <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ← If yes, which ones ? _____																																													

D. Mandatory declaration: We assure that the data in this explanation are truthful and complete and as a signatory I am able to form an opinion about this. We are aware that we are responsible towards the contractor for damages, which results from incomplete and incorrect data. We commit ourselves to exempt the contractor from claims for damages of thirds resulting from incomplete or incorrect data. We are aware that we are directly responsible towards thirds, irrespective of this declaration, which belongs in particularly to the employees of the contractor consigned with the handling repair of the product.

Name of the authorized person (in block letters): _____

_____ Date

_____ Signature

Company stamp

FAX**Fax No. ()****Pages (incl. cover sheet) ()****To:**

()

Richter Chemie-Technik GmbH
Otto-Schott-Straße 2
D-47906 KempenTelefon +49 (0) 21 52/146-0
Telefax +49 (0) 21 52/146-190richter-info@richter-ct.com
www.richter-ct.comContact person:
()Reference:
()Extension:
- ()E-Mail Address:
()Date:
()**Your order No.:** ()**Our Kom. No.:** ()**Serial No.:** ()

Dear Sirs,

The compliance with laws for the industrial safety obligates all commercial enterprises to protect their employees and/or humans and environment against harmful effects while handling dangerous materials.

The laws are such as: the Health and Safety at Work Act (ArbStättV), the Ordinance on Harzadous Substances (GefStoffV, BIOSTOFFV), the procedures for the prevention of accidents as well as regulations to environmental protection, e.g. the Waste Management Law (AbfG) and the Water Resources Act (WHG)

An inspection/repair of Richter products and parts will only take place, if the attached explanation is filled out correctly and completely by authorized and qualified technical personnel and is available.

In principle, radioactively loaded devices sent in, are not accepted.

Despite careful draining and cleaning of the devices, safety precautions should be necessary however, the essential information must be given.

The enclosed declaration of no objection is part of the inspection/repair order. Even if this certificate is available, we reserve the right to reject the acceptance of this order for other reasons.

Best regards
RICHTER CHEMIE-TECHNIK GMBHEnclosures

()